


# INSTALLATION INSTRUCTION FOR TYPE 2 LOWER BODY STRIPE

PART NO. 2 VW 146—222

## CONTENTS

- 1—LEFT FRONT DOOR STRIPE (DOG LEG)
- 1—LEFT BODY SIDE (50")
- 1—LEFT BODY REAR (61")
- 1—RIGHT FRONT DOOR STRIPE (DOG LEG)
- 1—RIGHT BODY SIDE (50")
- 1—RIGHT BODY REAR (61")

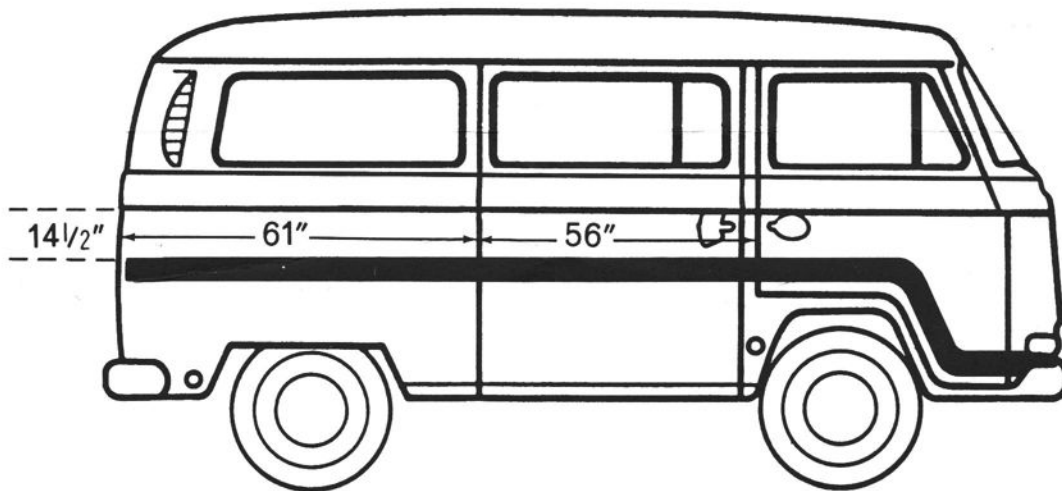

## IMPORTANT

Apply only at temperature between 60° and 80°. Do not apply to cold or hot surfaces.

Do not stretch material when applying or shrinkage will result later.

1. Clean area thoroughly; it is very important that all dust and road film be removed.
2. Begin the installation with the front doors. See illustration for positioning. Wet application is recommended. This allows easy repositioning and helps prevent bubbles and wrinkles. To apply wet, mix two or three drops of common household liquid detergent to one quart of water. Flood car surface with solution, peel all the protective backing off and lay on surface. Line up and position and press out water with a squeegee, working from one end to the other. Finish drying with towel or chamois.